

Bedienungsanleitung

CLES hybrid TS38



- Bitte lesen Sie diese Anleitung vor der ersten Inbetriebnahme sorgfältig durch. Vielen Dank.



Inhalt:

- 1.- Safety and installation instructions.
- 2.- Download APP on a mobile device.
- 3.- User's APP menu.
- 4.- Opening and closing with a mobile device.
- 5.- Opening and closing with 4 digit-code.
- 6.- Profesional area APP menu.
- 7.- Program new User & Password.
- 8.- Opening with master code.
- 9.- Changing master code.
- 10.- Opening with emergency mechanical key.
- 11.- Check battery level.
- 12.- Replacing the batteries.
- 13.- Smart Audit.
- 14.- Troubleshooting.
- 15.- Maintaining and cleaning the safe.
- 16.- Warranty.
- 17.- Entsorgung
- 18.- Technische Daten

1 .- Safety and installation instructions

- The manufacturer accepts no liability for damage in the following cases:
 - Damage to the product resulting from mechanical influences-
 - Alterations to the product without express permission from the manufacturer.
 - Use for purposes other than those described in the user manual.
- This device can be used by children aged 8 years or over, as well as by persons with diminished physical, sensory or mental capacities or a lack of experience and knowledge, providing they are supervised, or have been taught how to use the device safely and are aware of the resulting risks.
- Only use the product as intended.
- Do not make any modifications or alterations to the product.
- A master key and a master code are available for opening in an emergency.
- No unauthorised persons should have access to the master key. Store the master key very carefully in a safe location.
- **Triomf Smart Safe** is a last generation safe to safely store your valuables and use your Smartphone or a 4-digit code to close and open the safe.
- The control panel has an 1,77" TFT display and a keypad for entering the code.
- The model and ID can be identified on the plate on the front panel of the electronic safe.

- **Follow the instructions when installing:**
- Carefully check the safe for damage once you have removed it from the packaging. If there is visible damage, contact with the manufacturer.
- Install the safe on a flat and even surface.
- Select a location for installation which is a sufficient distance from heat sources (e.g. radiators). Avoid installing in locations with temperatures under 0°C and over 45 °C.
- Avoid damp ambient conditions (e.g. in the bathroom and swimming pool) in order to avoid condensation forming in the safe.
- Select a fastening material (screws with plugs, if necessary) which is appropriate for the base.
- Select a suitable installation location..
- Select an appropriate method for intallation (attachment on the rear or on the underside).
- Mark the drill holes according to the table below.

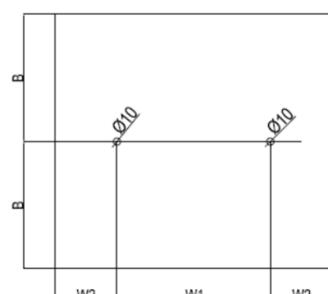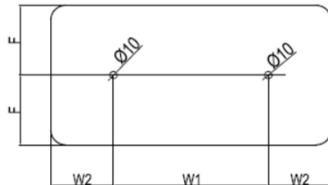

		Rear	
	TS38 S	TS38 M	TS38 L
F (mm)	95	95	95
W1 (mm)	210	210	210
W2 (mm)	85	85	85

		Underside	
	TS38 S	TS38 M	TS38 L
B (mm)	130	210	235
W1 (mm)	210	210	210
W2 (mm)	85	85	85

- Pre-drill the hole in the mounting location (e.g. in the Wall or cupboard).

- **2.- Download APP on a mobile device.**




- Download the App from the Google Play or App Store platforms according to your mobile device.
- You can also get it by scanning the QR code below.



Triomf Smart Safe
Triomf Systems



- **3.- User's APP menu**

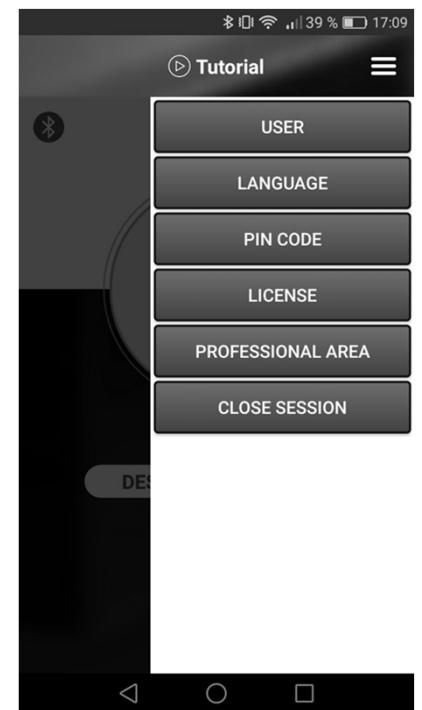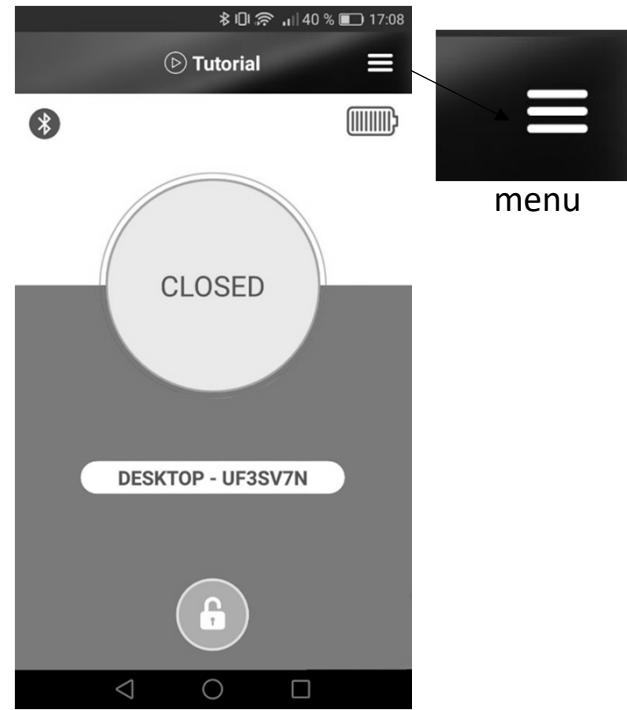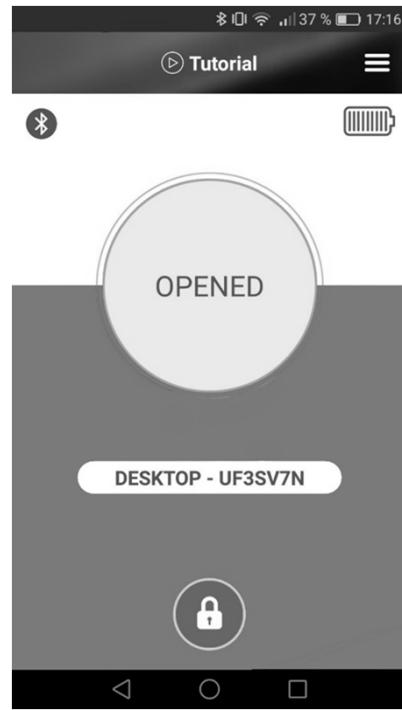

Starting screen

Status screen

User's menu

- **3.- User's APP menu**

- **3.1** **USER** This option allows you to customize the App with a username.

enter the username you want and press **SAVE**

Enter new user name:

SAVE

- **3.2** **LANGUAGE** Select the language

ENGLISH

SPANISH

- **3.3** **PIN CODE** This option allows you to protect te App with a 4 digit security PIN.

- **3.3.1.- Enter current PIN** Enter the old PIN code*: (Factory initial pin 0000)

Enter the old PIN code*:

(Factory initial pin 0000)

- **3.3.2.- Enter new PIN** Enter a new PIN code**:

Enter a new PIN code**:

- **3.3.3 .- Repeat new PIN** Enter again the new PIN code**: and press **SAVE**

LICENSE:


"THE SOFTWARE" shall be taken to mean the software contained in this app and any subsequent versions or upgrades received as a result of having purchased this app.
"BUYER" shall be taken as the original purchaser of the software.

- **3.4** **LICENSE** Terms and conditions of use of the Triomf App.

4.- Opening and closing with mobile device.

- **4.1 Closing the safe.**
- 4.1.1 Open the app, enter the SmartSafe ID and press 
- 4.1.2 Close the door and press App button 
- 4.1.3 **CLOSED** appears on the display.

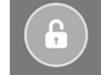

- **4.2 Opening the safe.**
- 4.2.1 Open the app, enter the SmartSafe ID and press 
- 4.2.2 Press App button 
- 4.2.3 **OPEN** appears on the display.



Important : You will not have to enter or remember any code to close or open the safe.

If your mobile device is not paired with the safe, please completely close the App and try again.

You can only open the Safe with the same mobile device that closed it.

5.- Opening and closing with 4 digit-code.

- **5.1 Closing the safe.**
- 5.1.1 Enter a four digit code.
- 5.1.2 Press the **close** button..
- 5.1.3 **CLOSED** appears on the display




- **5.2 Opening the safe.**
- 5.2.1 Enter the correct four digit code.
- 5.2.2 The code entered is shown in the display and the safe will open.
- 5.2.3 **OPEN** appears on the display.




NOTE: After five incorrect attempts, the safe will remain blocked for 5 minutes and no further entries are possible. As soon as a button is pressed, the message BLOC-1 appears on the display.


- 6.- Professional area APP menu.

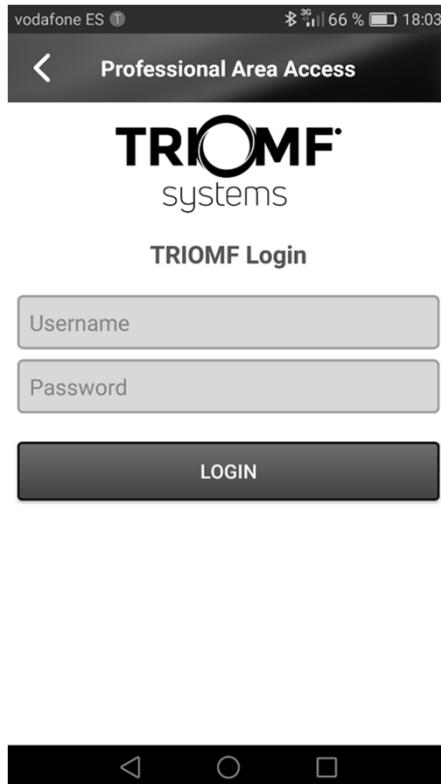

Registration and identification screen

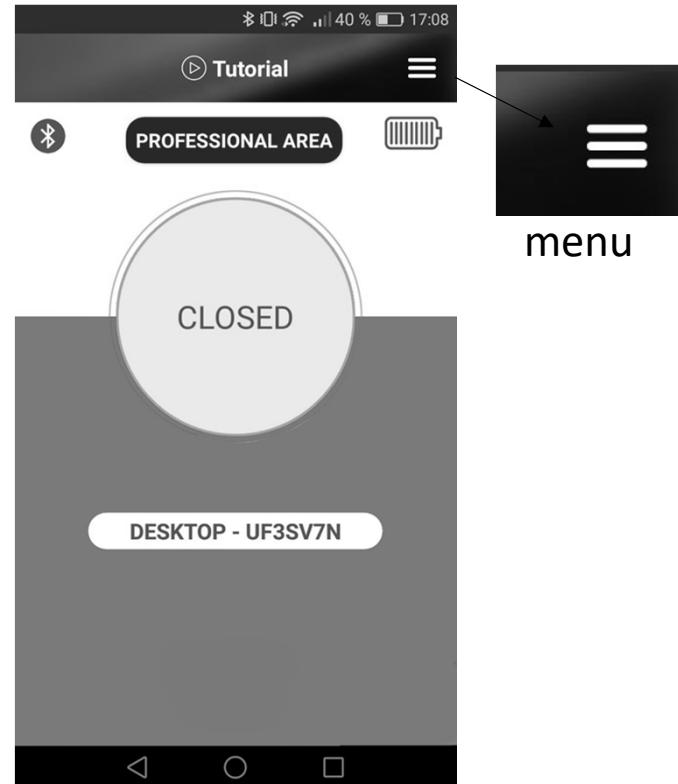

Status screen

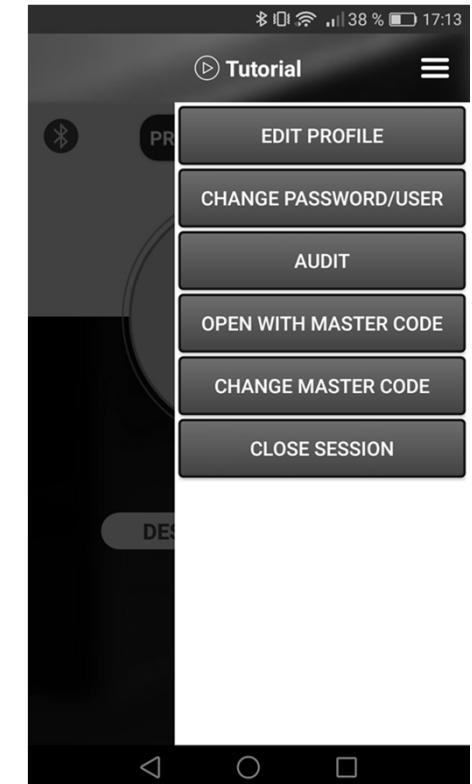

Professional area menu screen

7.- Programming new User and Password.

- 7.1 Open the App, enter the SmartSafe ID and press 
- 7.2 Open the menu and select Professional Area



- 7.3 Enter Username and Password.

Username Password

- 7.4 Open the menu and select.



- 7.5 Insert new user. (alphanumeric of 4 characters).

Insert new user name:*

- 7.6 Insert new password. (alphanumeric of 4 characters).

Insert new password:*

- 7.7 Insert again the new password.

Insert again the new password:*

- 7.8 Select



Nota: IF you select Show password you can see the data entered during the process.

If you want to delete or correct the data, press



8.- Opening with master code.

- 8.1 Open the app, enter the SmartSafe ID and press 

- 8.2 Open the menu and select Professional Area




- 8.3 Enter your Username and Password.




- 8.4 Open the menu and select Open with Master code.



- 8.5 Enter the Master code and press OK.

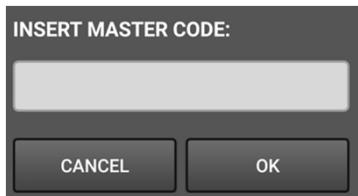

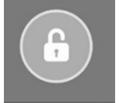
- 8.6 Press App button  and the safe will open automatically.

9.- Changing master code.

- 9.1. Open the App, enter the SmartSafe ID and press 
- 9.2. Open the menu and select Professional Area

- 9.3. Enter your Username and Password

- 9.4. Open the menu and select Change Master Code

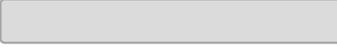- 9.5 Enter the current master code.
Enter the old master code:

- 9.6 Enter new 6-digit master code.
Enter a new master code:

- 9.7 Enter again new 6-digit master code.
Enter again the new master code:

- 9.8 Press “SAVE”.


Note: If you select the box Show password you can see the code entered during the process.

The key  allows to keep the new master code in memory during 15 minutes to facilitate the programming process it in different safes.

10.- Opening with emergency mechanical key.

All safes are equipped with a high security mechanical lock to open the safe in case of emergency.

- 1.- Remove the protective label 
- 2.- Insert the key in its correct position.
- 3.- Turn the key 75º clockwise
- 4.- Pull the door.



Important:

Keep the key in a safe place and never inside the safe.

In the key you will find the engraved identification code.



11.- Check battery level.

We recommend checking the battery level before changing them.

11.1 – Through the App:

You can view and control the battery level of the safe at any time in the icon 

When it is necessary to replace the batteries, the icon will change to orange (we recommend changing batteries) or red (it is imperative to replace the batteries as the App will not allow to close the safe).

11.2 – Through the Keypad:

Press **close 1 2 3 close** and automatically on the display of the safe will display the battery voltage and proceed according to the table below:

Voltage	Charging Status	
6,2 V - 5,0 V	OK	
4,9 V - 4,5 V	Batteries should be replaced as soon as possible.	
< 4,4 V	Batteries must be replaced	

Note: This operation can be done with the door in open or closed position.

12.- Replacing the batteries.

The batteries must be replaced after no later than one year. Use four high-quality alkaline AA batteries and always change all batteries at the same time.

Pay attention to the polarity.


12.1 – Unscrew the cover screw. (A)

12.2 - Remove the lid. (B)

12.3 – Remove the four used batteries from the compartment.

12.4 - Place the new batteries in the compartment respecting the polarity.

12.5 - Place the lid in its correct position and fix it with the screw (A)

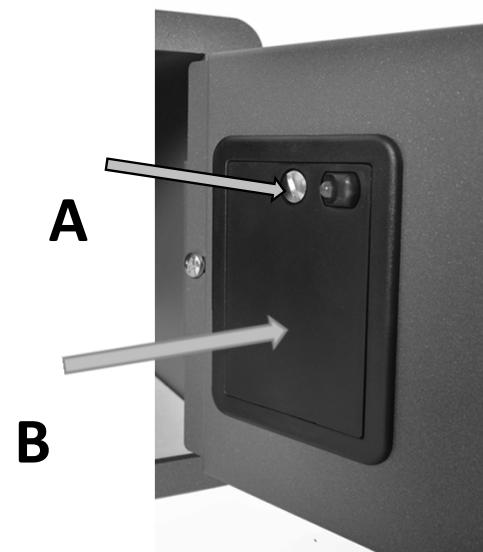

13.- Smart Audit.

All safes are equipped with an internal memory where all the operations are memorized with date, time and device used.

In just 4 “clicks” we can see in our mobile device the last 250 operations.

13.1 – Open the App, , enter the SmartSafe ID and press **CONNECT**


13.2 – Open the menu and select Professional Area. **PROFESSIONAL AREA**

13.3 – Enter your Username and Password

13.4 – Open the menu and select **AUDIT**

13.5 – Data transmission starts automatically and in a few minutes you can view the last 250 operations on your device.

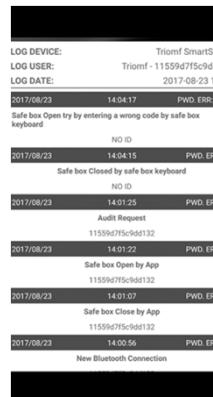


	
--	--

The table displays a log history with the following data:

LOG DEVICE	LOG USER	LOG DATE	TIME	PWD. ERR
Triomf SmartSafe 3	Triomf - 1159af7f5c9d132	2017-08-23	14:04:17	ERR: 888
Safe box Open try by entering a wrong code by safe box keyboard				
NO ID			14:04:15	PWD. ERR: -
Safe box Closed by safe box keyboard				
NO ID			14:01:25	PWD. ERR: -
Audit Request				
1159af7f5c9d132				
2017/08/23			14:01:22	PWD. ERR: -
Safe box Open by App				
1159af7f5c9d132				
2017/08/23			14:01:07	PWD. ERR: -
Safe box Close by App				
1159af7f5c9d132				
2017/08/23			14:00:56	PWD. ERR: -
New Bluetooth Connection				

13.- Smart Audit.

13.6 – Once you visualize the audit on your device, select the key  and the data can be sent by email, saved on your device or shared.

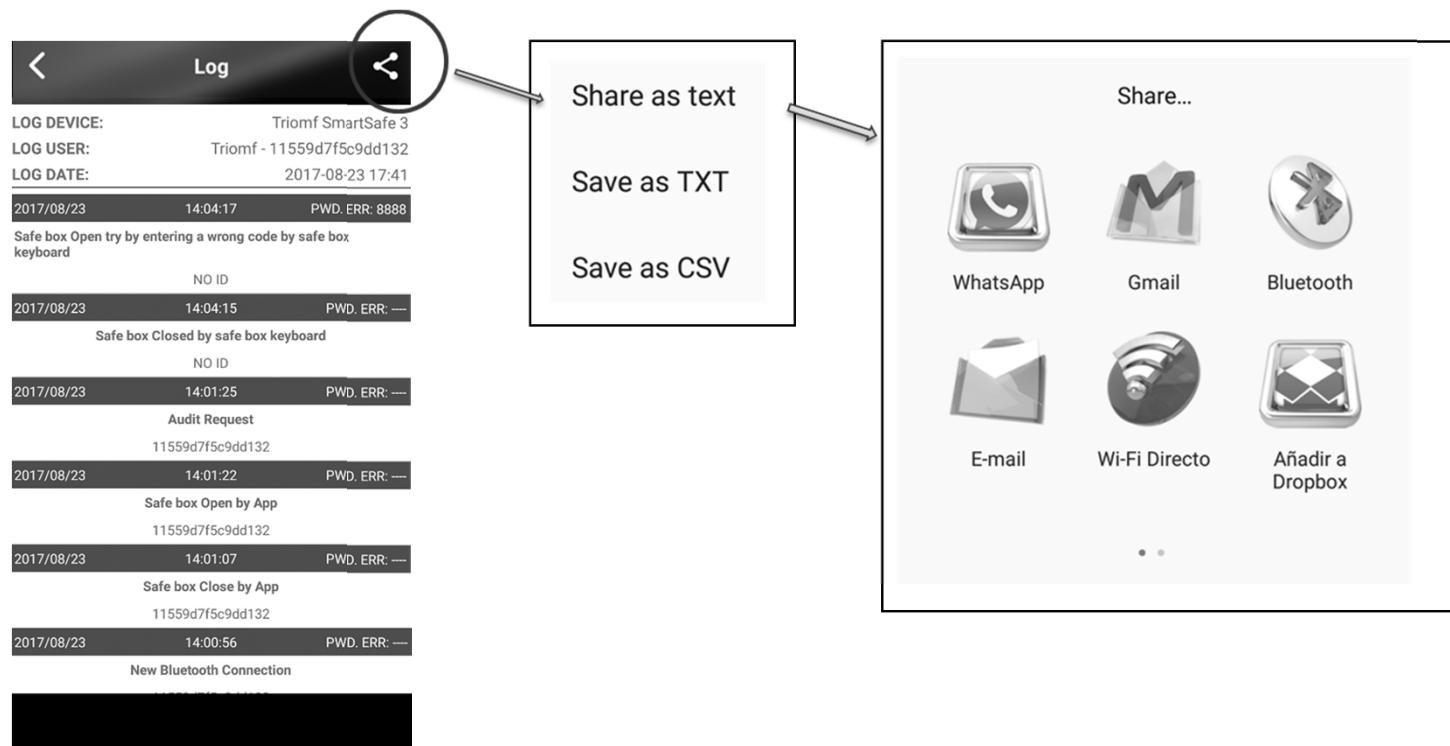

14.- Troubleshooting.

Note: Before contacting the technical service, please check and consult the following table where you will find the possible causes and solutions.

Display	Fault	Possible cause	Suggested remedy			
ERROR	A continuous audible signal sound	Wrong code	Enter correct code			
		Time for entering code has elapsed	Enter the code within 6 seconds			
BLOC -1	3 shorts audible signals sound whenever any button is pressed	The safe is blocked once an incorrect code has been entered five times.	Wait for 5 minutes without pressing any buttons.			
			Open the door mechanically with the master key.			
BLOC -C	The bolts do not extend completely	The locking mechanism is not functioning correctly	Make sure the bolts are not jammed in the frame Check the connections of the geared motor			
< 4,4 V	The safe does not close	The batteries is low	Replace the batteries			
	The master key will not turn	Wrong key	Check that the key code is the correct one.			
	The safe do not work	Batteries are very low or defective Batteries are not properly placed	Replace the batteries Check that the batteries are properly placed If hte safe is closed, open with mechanical key and replace the batteries			
	The mobile device is not paired	You are far from the safe.	Get closer the safe, close the App and try again.			

15.- Maintaining and cleaning the safe.

Our safes do not need any specific maintenance. However we recommend installing them in a clean environment, free of dust and humidity to avoid damage to their mechanical and electronic components.

Do not use any object or cleaning product that is corrosive or hard, as it could damage the safe.

Ocassionally clean the safe with a damp cloth.

16.- Warranty.

The statutory warranty period applies. If the product is defective, please contact with your service partner, dealer or distributor.

Our experts will be happy to help you and will discuss the warranty process with you in more detail.

17.- Entsorgung

Place the packaging material in the appropriate recycling waste bins wherever possible.



If you wish to finally dispose of the product, ask your local recycling centre or specialist dealer for details about how to do this in accordance with the applicable disposal regulations.



Protect the environment !

Do not dispose of any batteries with general household waste.

Return defective or used batteries to your retailer or dispose of them at collection points.

18.- Technische Daten

CLES hybrid			
Modell	S	M	L
Inhalt (L)	14,6	25,8	29,3
Höhe x Breite x Tiefe (mm)	190 x 380 x 260	190 x 380 x 420	190 x 380 x 470
Gesamtgewicht (kg).	12,5	14,5	15,5
Nettогewicht (kg).	12	14	15



SEKURUM GmbH

Leopoldstraße 48

6020 Innsbruck

T +43 512 58 10 14

F +43 512 58 10 14 14

E office@sekurum.at

H www.sekurum.at